



**CONGRATULATIONS ON YOUR PURCHASE
OF THE SKAB QLR PLIERS.**

WWW.SKABTOOLZ.COM

THESE PLIERS WERE DESIGNED SPECIFICALLY TO FACILITATE THE REMOVAL
OF THE FOLLOWING CHAIN MASTER LINKS:


SRAM POWER LINK G. S. & 9 SPD (COVERS ALL 8 & 9 SPD LINKS)

KMC MISSING LINK CL366, CL371, CL373, CL562, CL566, CL571, CL573 (8, 9, & 10 SPD LINKS)

PLEASE READ THE FOLLOWING INSTRUCTIONS TO ENSURE THE PROPER USE OF YOUR QLR-0 OR QLR-1 PLIERS.


STEP ONE

LOCATE MASTER LINK AND INSERT
QLR PLIERS AROUND THIS LINK

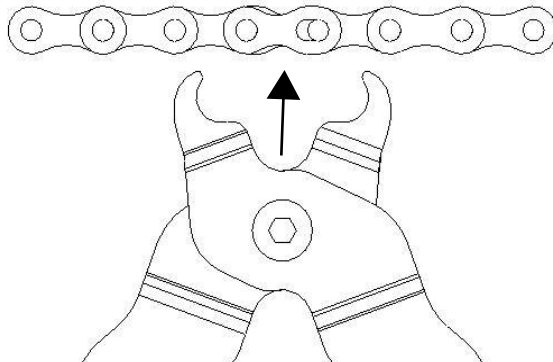

STEP TWO

WITH FREE HAND, USE FINGERS TO
APPLY PRESSURE TO BOTH SIDES
OF THE MASTER LINK. THIS SIDE
PRESSURE IS REQUIRED TO UNLOCK
THE MASTER LINK AND MUST BE
APPLIED BEFORE SQUEEZING THE
QLR PLIERS.

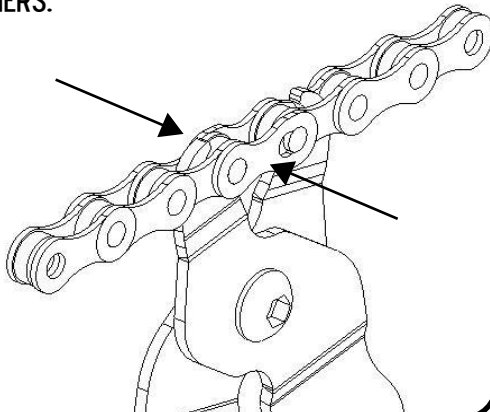

STEP THREE

WHILE MAINTAINING SIDE PRESSURE,
SQUEEZE QLR PLIERS TOGETHER TO
REMOVE THE MASTER LINK.

